



ED3 SkidWeigh Plus Series

- * Turn on ignition switch
- * The LCD display will prompt you to input operator ID#
- * Input valid operator ID# and press **“Enter key”**
- * LCD display will show date / time and vehicle will be operational
- * System is ready to operate



Insert the forks into the pallet or product to be weighed

Lower the loaded forks to the ground.

- With LCD showing date/time, lift load **just above the ground**
- Do not manipulate the tilt, side shifter or move vehicle
- LCD display will show **“PLEASE WAIT”**.
- Within few seconds load weight will be indicated on LCD display. If you press **“P key”** the indicated load weight will be saved to USB. (Systems with onboard printer or /



Accumulative Load Weight Function

- With LCD display showing load weight, press “**Enter key**” to start accumulating loads
- With last load weight lifted and shown on LCD display by pressing “**P key**” all individual loads and total load weight will be saved to the USB port.

