

ED3-CO SkidWeigh Plus

Automatic Closed Session Data Recording for Any Selected Load




DEFAULT FACTORY CLOSED SESSION RECORDS

- * Vehicle ID#
- * OPERATOR ID#
- * Ignition on, Start time
- * Date / Time
- * Commodity ID#
- * Load Weight Lifted
- * Order Number

Automatic Measurement Cycle with Data Download to USB Port

	A	B	C	D	E	F	G	H	I	J	K	L
1	Truck/ID	Date/Time	Event Type	Weight	Event	Details						
2	100/222	2023-01-21 15:39	POUNDS	0	0	123		Y9				
3	100/222	2023-01-21 15:40	POUNDS	1691	768	33		66				
4	100	2023-01-21 15:42	EVENT		START							
5	100	2023-01-21 15:43	EVENT		START							
6	100	2023-01-21 15:44	EVENT		START							
7	100	2023-01-21 15:45	POUNDS	1691	768	64377		1111				
8	100	2023-01-21 15:45	POUNDS	1381	627	111		111				
9	100	2023-01-22 9:34	EVENT		START							
10	100	2023-01-22 9:42	POUNDS	1356	616	2E+11		726V				
11	100	2023-01-22 9:43	POUNDS	1914	870	6.7805E+10		61526				
12	100	2023-01-22 9:44	POUNDS	2724	1238	64377		562165				
13	100	2023-01-22 9:44	POUNDS	1442	655	7.5678E+10		768328				
14	100	2023-01-22 9:48	POUNDS	1786	811	16756						
15	100	2023-01-22 9:49	POUNDS	1699	772	2E+11		61656				
16	100	2023-01-22 9:50	POUNDS	1127	512	8.4337E+11		562176				
17	SDRAM CLEAR	2023-01-21 15:25										
18												
19												
20												
21												
22												

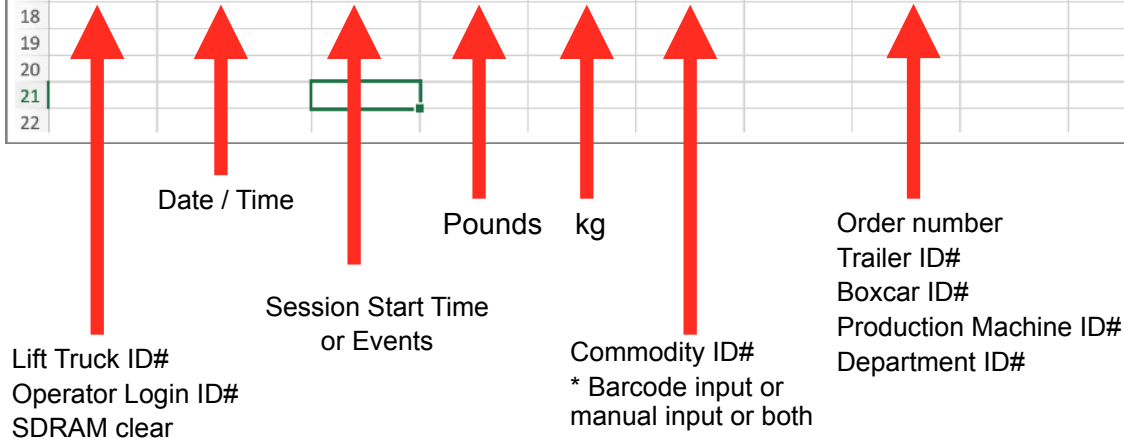

With LCD display showing Date /Time the ED3-CO system can be used any time with any load on the forks as standard load check weighing scale

Session Start (Loaded forks on the ground)

- * 1. To initiate closed session recording for any selected load on the forks
- * A. Press external button once
- * B. The LCD display will automatically show **COMMODITY ID#**
- * C. Use barcode scanner to input Commodity ID#.
Note 1: If the code is damaged and can not be read or scanner is faulty or manual input is required, press external switch two times.
*Note 2: When barcode scanner is used the LCD display will automatically move to **ORDER NUMBER.***
Depending on your application you can input Trailer ID#, Boxcar ID#, etc.
- * D. Input into the system a valid ID number and press Enter key on last digit.
Note 3: After each digit inputed via keypad you must press Enter key.
The LCD display will automatically show **LIFT LOAD**
- * E. Activate the lift control valve and lift the load just above the ground. Within few seconds the load weight will be shown on LCD display.

Session Finished

All data for selected load lifted will be saved to USB port

